

10% DISINFECTANT SANITIZER

Product # 172

Concentrated dual quat disinfectant

The concentrated liquid is designed as a general sanitizer and disinfectant for use in homes, hospitals, schools, office buildings and other facilities to control the hazard of cross contamination. It is formulated to disinfect a wide variety of hard, non-porous, inanimate surfaces like floors, walls and countertops.

Disinfect and Sanitize:

Households:

- Floors and walls
- Sinks and showers
- Countertops
- Garbage cans

Hospitals, Nursing Homes, Institutions, Dental Offices:

- Surgical instruments
- Dental equipment
- Barber tools
- Restrooms

Restaurants, Bars, Food-Processing Equipment:

- Dishes
- Glassware
- Silverware
- Utensils

Dairies:

- Tanks
- Lines
- Pails
- Milk cans

Effective Against Tubercular, Bacterial and Viral Organisms:

- Staphylococcus aureus
- Influenza A2 (flu virus)
- Vaccina (smallpox virus)
- Adenovirus type 2 (acute respiratory disease)
- Salmonella choleraesuis
- Herpes Simplex (cold sores and blisters)
- Pseudomonas aeruginosa

Features and Benefits

- Highly concentrated cleaner contains a total of 10% available quaternary ammonium compounds.
- Effective against pathogenic bacteria and viruses on environmental surfaces.

Properties

Appearance.....	Sl. Yellow liquid
Fragrance.....	Detergent
Specific gravity.....	0.99
pH.....	7.0-8.0
Stability.....	1 year
Flash Point.....	>200° F
Solubility.....	Complete in water

Directions Complete directions on product label

To Disinfect: Dilute 3 – 3.5 ounces in 5 gallons of water. Apply with a mop, cloth or sponge.

To Sanitize: Dilute 1 ounce in 4 gallons of water. Apply with a mop, cloth or sponge. No potable water rinse is required.

Authorizations

EPA Registered Product.

Active Ingredients

	Amount Active
n-Alkyl (60% C ₁₄ , 30% C ₁₆ , 5% C ₁₂ , 5% C ₁₈) Dimethyl benzyl ammonium chloride	5.0%
n-Alkyl (68% C ₁₂ , 32% C ₁₄) Dimethyl benzyl ammonium chloride	5.0%

Safety


Danger: Causes severe eye irritation and skin damage. Harmful if swallowed. Keep out of the reach of children.

DOT Shipping (ground transportation)

Proper Shipping Name:	None
Class:	None
ID Number:	None
Package Group:	None

NFPA RATINGS

Flammability

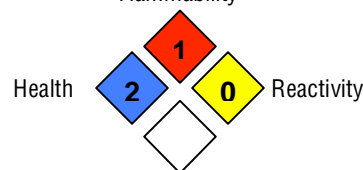

Quantities

- 55 gallon
- 35, 30 & 20 gallon
- 5 or 6 gallon
- 6 X 1 gallon
- 4 X 1 gallon

