

Orange Away

Product # 8378

All-natural solvent cleaner

One of the most powerful, yet most natural cleaners you can use. Made with d-Limonene, it's so strong that it's capable of removing tough tar and adhesives from machinery and tools. It combines the power and versatility of a multi-purpose solvent cleaner, with the convenience and ease of an aerosol.

A great general purpose cleaner:

- Oven and grill
- Laundry pre-spotter
- Motors
- Equipment
- Tools
- Metal parts

Effective Against

- Tar and asphalt deposits
- Printing ink remover
- Odors
- Decal remover
- Printing ink
- Grease and grime
- Gum and wax deposits
- Carbon deposits

Features and Benefits

- d-Limonene is a powerful solvent made from natural orange peel extracts
- All natural, biodegradable formula uses no petroleum distillates
- Effectively stripes away grease, grime, wax oils adhesives, tar, gums and more

Properties

Appearance.....	Aerosol
Fragrance.....	Citrus
Specific gravity.....	0.76
Flash point.....	-156 ° F (estimated)
Solubility.....	Negligible
VOC content.....	85-90%
Biodegradable	Yes
Propellant.....	Liquified petroleum gas

Directions

Spray directly onto surface to be cleaned. Allow to work for 30 seconds. Flush away loosened grease and grime deposits with water. On fabrics and plastics, test in an inconspicuous area before using.

Active Ingredients

Active Ingredients	CAS Number
d-Limonene.....	5989-27-5
Poly (oxyethylene) nonylphenol.....	9016-45-9
Liquified Petroleum Gas.....	68478-86-8

Safety

Warning: Flammable. Eye and skin irritant. Keep out of the reach of children.


DOT Shipping (ground transportation)

Proper Shipping Name:	Consumer Commodity
Class:	ORM-D
ID Number:	None
Packing Group:	None

Quantities

- 20 ounce can
- 15 ounces net weight
- 12 cans per case

NFPA RATINGS Flammability

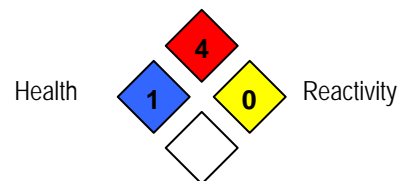

**TOTAL
SOLUTIONS**

Milwaukee, WI 53224 • 1-800-743-6417 • Fax 414-354-9219 • www.athea.com